# **DVR Universal Remote**

MENU Displays the Applications Menu

### GUIDE

Displays the program guide listings

# OK/SELECT

Selects highlighted screen options.

### SETTINGS

Displays settings menu.

#### MUTE

Silences the audio. Press to activate. Press again to restore sound to the previous level.

# VOLUME AT

Raises or lowers the sound level

#### **FAV**

Displays favorite channels.

## DAY +>

Skip forward or backward a whole day in the program guide.

#### REPLAY

Replays the previous few seconds of a program

Displays a list of programs you have recorded, allowing you to select one for viewing.

#### **NUMBER PAD**

Enter numbers to tune to channels. Also, make numeric entries on on-screen menus.

#### ON-OFF

Opens or closes the PIP window through the Cable STB.

# VIDEO SOURCE

Selects a video source from available video components.

#### **SWAP**

Swaps the contents of the PIP window and the main viewing screen through the Cable STB so that the PIP window displays on the main screen.

# LIGHT BUTTON

Press to backlight all keypad buttons. Press again to turn off (or simply wait 10 seconds for automatic shut-off).

# ON/OFF

Power on/off up to five components with one hutton

SYSTEM

ON

M2

• 5 •

M1

STOP

(Pe

МЗ

### **POWER**

Turn your TV, AUD, DVD, AUX & Cable Box on and Off.

# AUX, DVD, AUD, TV, CBL Device Buttons used to select the component

you want to operate and signals remote control activity.

### INFO

Displays information about the program currently playing or highlighted in the program guide.

#### **EXIT**

Exit from current screen.

#### PAGE +/-

Accesses pages above or below the information currently displayed.

#### **CURSOR NAVIGATION PAD**

Navigate to and highlight an item from the on-screen choices.

A, B, C, D

Make direct selection from on-screen menus.

#### CHANNEL ▲▼

Selects the next higher or lower channel.

#### LAST

Returns to the previously tuned channel.

#### LIVE

Displays live television programming.

### VCR/DVD/VOD KEYS

Perform standard VCR and DVD functions when the VCR and DVD mode, and Video-On-Demand functions when the CABLE mode.

#### RECORD

Record current programming.

## ASPECT/#

Changes the HD screen viewing aspect ratio through the Cable STB.

## PIP CH +/-

Selects the next higher or lower channel in the PIP window through the Cable STB.

### MOVE

Moves the PIP window to another location on the screen through the Cable STB.